



Nuvoton 8051 IAR Project Options

First of all setup the Nuvoton "Nu-Link_IAR_Driver"

1. Select "Device"

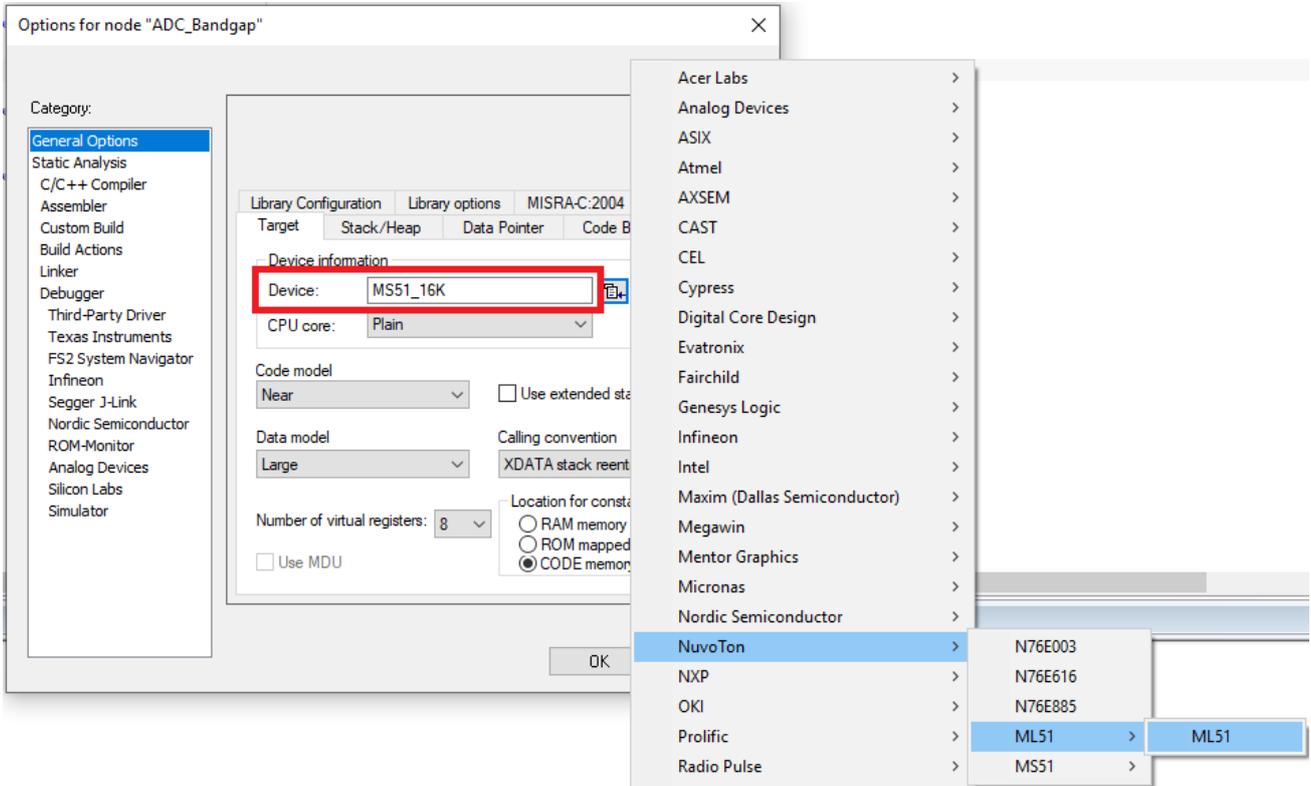


2. C/C++ compiler

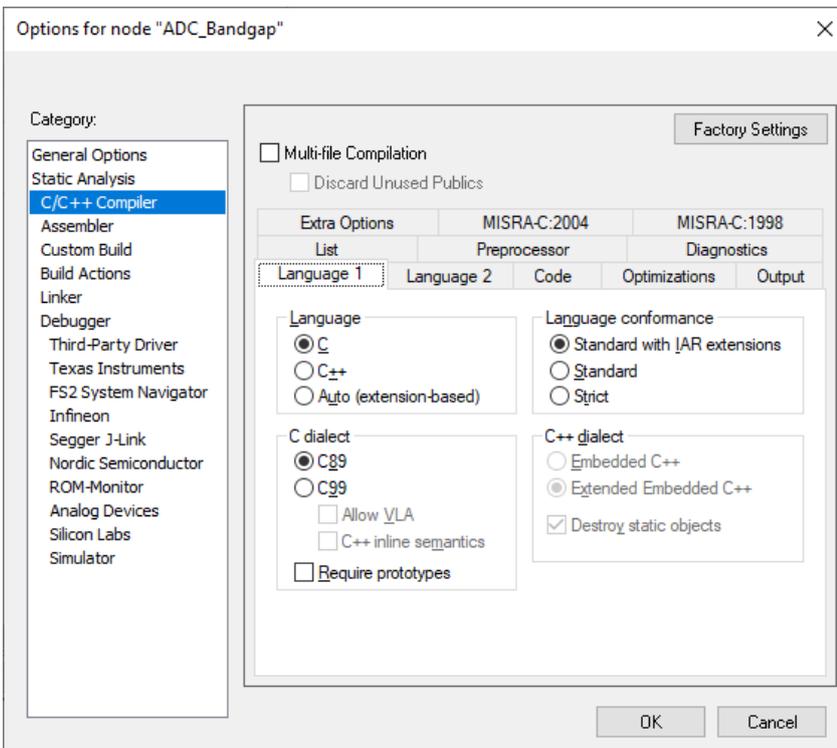

3. Linker

Copy following linker file or select from customer setup folder. (This files setup by the “Nu-Link_IAR_Driver” and the path is based on customer setup)


Link path: `$TOOLKIT_DIR$\config\devices\NuvoTon\Ink51ew_ML51.xcl`

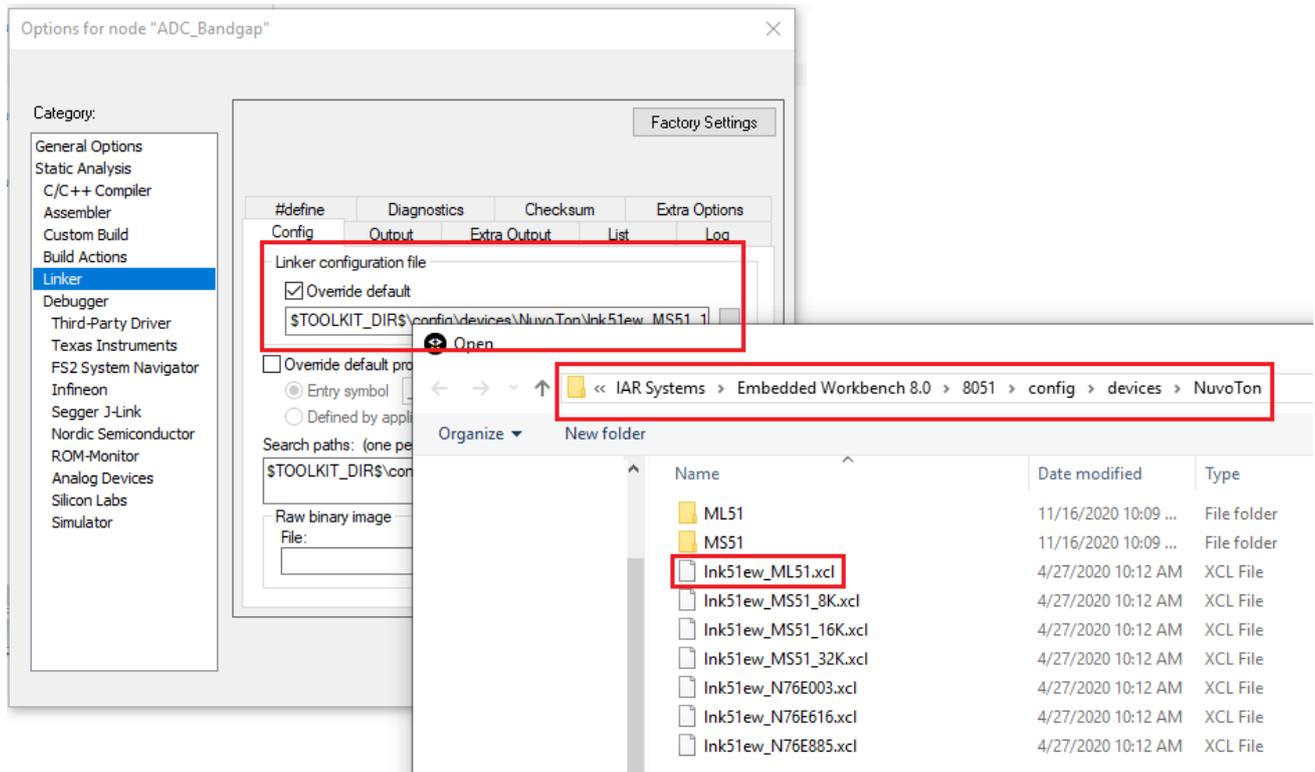

4 Debugger

Driver select as “Third-Party Driver”

Device Description file select Link path: `$TOOLKIT_DIR$\config\devices\NuvoTon\ioML51.ddf`

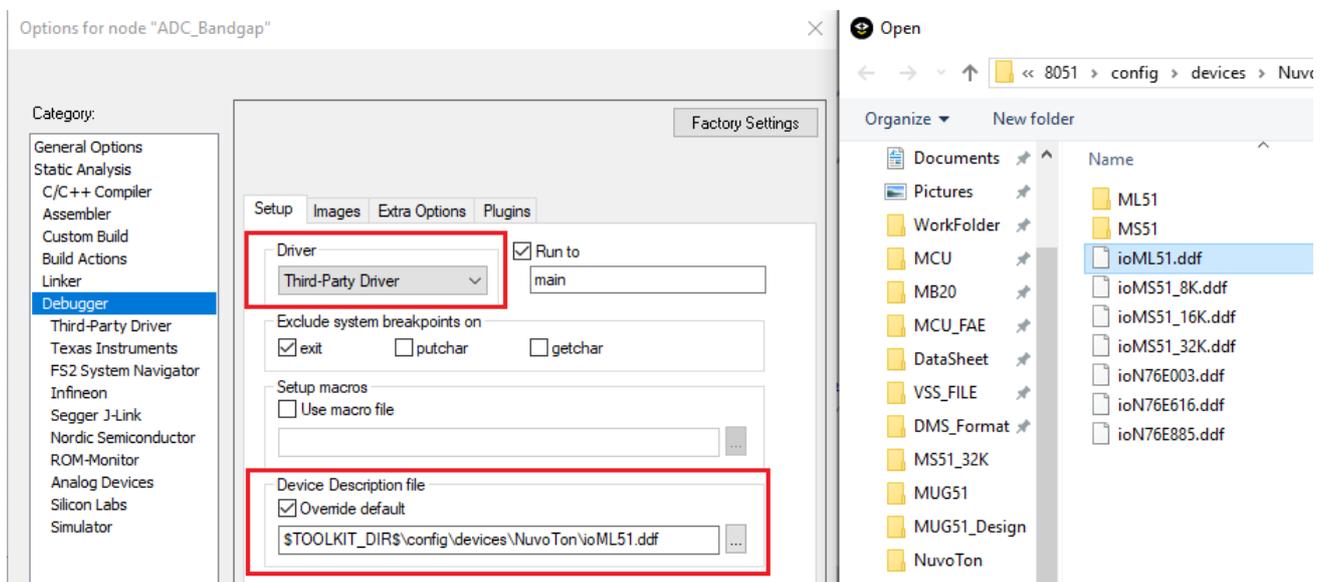

5 Third-Party Driver

Link path: \$TOOLKIT_DIR\$\..\..\Nuvoton Tools\Nu-Link_IAR\Nu-Link_IAR_51.dll

